

DO42FLc-21 Spare Parts Listing

NO	Part	Unit	Qty	NO	Part	Unit	Qty
1	Bolt M6x35	PC	4	35	Motor fan	PC	1
2	Cylinder head	PC	1	36	Axis circlip Φ 14	PC	1
3	O Ring	PC	1	37	Srew M4x8	PC	1
4	Right-angle connecter	PC	1	38	Spring washer 4	PC	1
5	Valve plate	SET	1	39	Star Wahser 4	PC	1
6	Valve gasket δ 0.8	PC	1	40	Wire connector	PC	2
7	Inlet valve δ 0.3	PC	1	41	/	PC	/
8	Locating pin Φ 3.1x6	PC	2	42	Capacitance	PC	1
9	Cylinder Φ 42	PC	1	43	Star washer 8	PC	1
10	Screw M8x22	PC	2	44	Bolt M5x8	PC	10
11	Spring Washer 8	PC	2	45	Motor Cover	PC	1
12	Cylinder gasket	PC	1	46	Air filter M16x1.5	SET	1
13	Piston ring Φ 42	SET	1	47	Tube gasket	PC	2
14	Piston Φ 42	PC	1	48	Discharge tube	SET	1
15	Piston pin Φ 12x35	PC	1	49	Shockproof	PC	4
16	Hole circlip 12	PC	2	50	Tank Plug	PC	1
17	Oil breather	SET	1	51	/	PC	/
18	Bolt M6x16	PC	4	52	/	PC	/
19	Oil release bolt	SET	1	53	5' Wheel assembly	SET	2
20	G1/2 Oil leveler	SET	1	54	Check valve	PC	1
21	Crankcase cover	PC	1	55	Drain valve	SET	1
22	Rubber gasket	PC	1	56	Foot Pad	SET	2
23	Conrod	PC	1	57	un-load tube	SET	1
24	Screw M8x22-left	PC	1	58	powercord	SET	1
25	Crank	PC	1	59	Switch Gasket	PC	1
26	Crankcase	PC	1	60	3/8-1/4 Connector	SET	1
27	Sealing ring 20x40x7	PC	1	61	Safety valve	PC	1
28	Bearing 6204-2Rz	PC	1	62	Pressure gauge 50	PC	1
29	65mm Rotor	SET	1	63	1/4 connector	PC	1
30	65mm Stator	SET	1	64	pressure gauge 40	PC	1
31	Bearing 6202-2Rz	PC	1	65	Ball Valve	PC	2
32	Motor bracket	PC	1	66	Regulator	PC	1
33	spring washer 5	PC	4	67	Pressure Switch	PC	1
34	Bolt	PC	4	68	handle grip	PC	1

D042FLc-21
Exploded Diagram



